


FERRO CONCEPTS - ADAPT DRAG HANDLE INSTALLATION

INNCORRECT INSTALLATION MAY CAUSE PRODUCT MALFUNCTION OR FAILURE. FOLLOW INSTRUCTIONS CAREFULLY

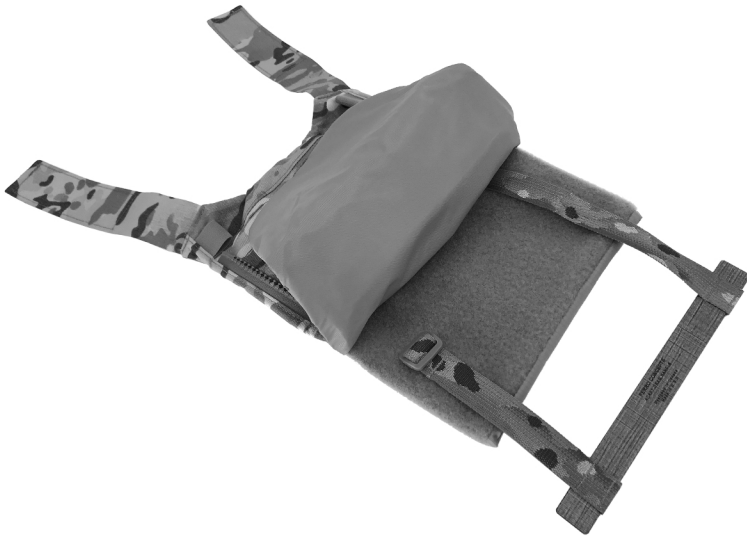

1. REMOVE ARMOR PLATE FROM REAR PLATE BAG TO EASE INSTALLATION. INSERT DRAG HANDLE UNDER PLATE BAG FLAP.



2. WEAVE BOTH STRAPS THROUGH TOP MOLLE SLOTS. STRAPS SHOULD BE 6 MOLLE COLUMNS APART. PULL STRAPS UNTIL THEY FULLY SEAT.



3. SLIDE THE TWEAVE COVER OVER THE RIGHT SIDE STRAP. COMPRESS THE COVER IF NECESSARY TO ASSIST IN THE NEXT STEP.



4. WEAVE THE RIGHT SIDE STRAP THOUGH BOTH SIDES OF THE TRI-GLIDE LOCATED ON LEFT SIDE STRAP. ADJUST LOOP TO DESIRED LENGTH.



5. TO FULLY LOCK THE STRAPS, LOOP THE RIGHT SIDE STRAP BACK THROUGH THE RIGHT SIDE OF THE TRI-GLIDE. PULL TIGHT TO REMOVE ANY SLACK.



6. SLIDE THE TWEAVE COVER OVER THE STRAP ASSEMBLY. PULL ON HANDLE TO CONFIRM ASSEMBLY IS SEATED AND LOCKED CORRECTLY.